


# HOW TO FIT

**UNIVERSAL SLIDING WINDOWS**


**1.**

To make your template, flip the window over and place on a large piece of cardboard/paper. Draw a line around the perimeter of the window shape then set the glass down (a)

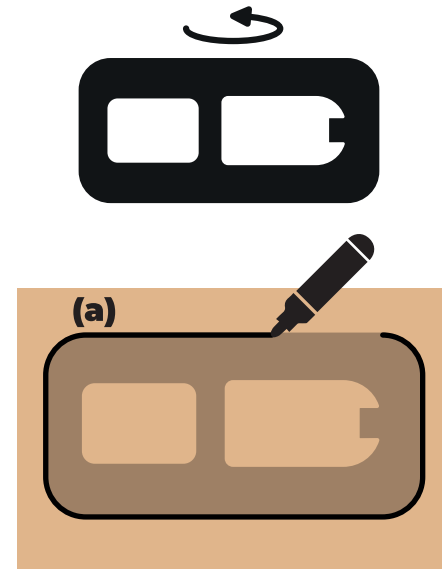

**2.**


Measure 25mm INSIDE the perimeter line and re-draw another line (b)  
This is your template and will leave enough room for your bond to settle.

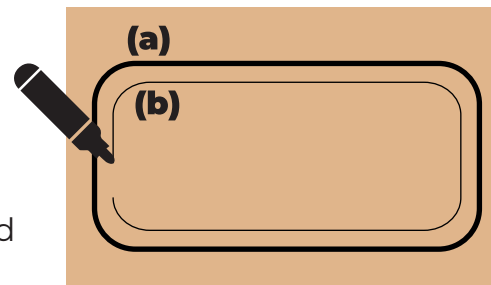

**3.**


Cut out the shape, following line (b) and your template is ready to go.

Now onto the bonding process.

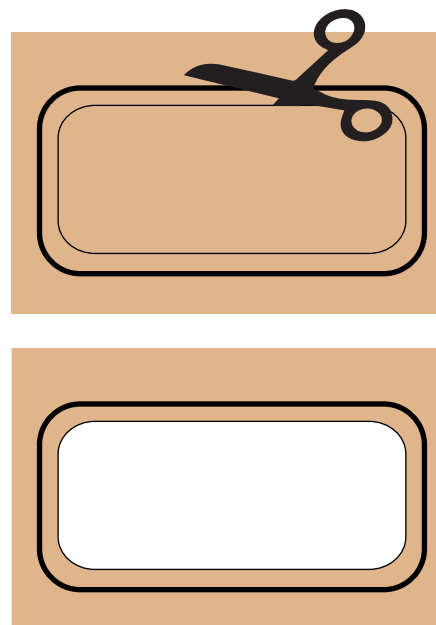

**4.**

DO NOT apply the same amount of bond as a regular sized window, the whole tube doesn't need to be used.

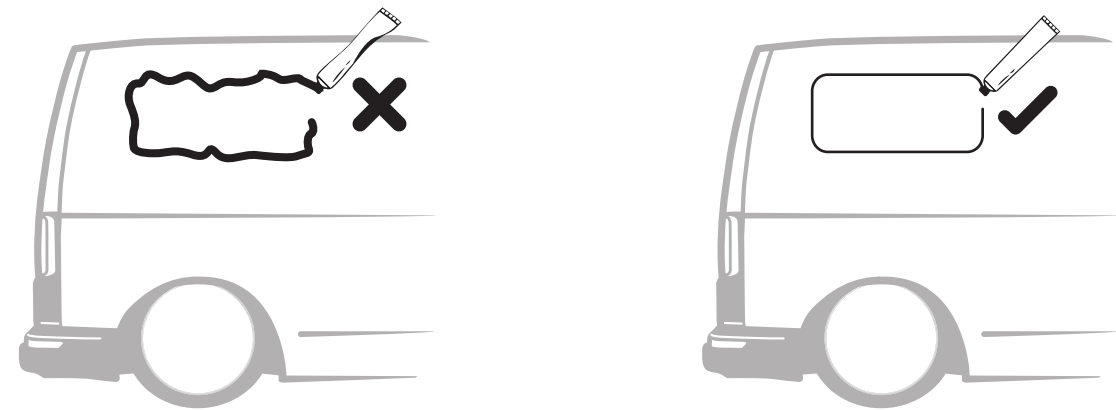

**5.**

There are drainage channels at the bottom of the window. Use the same smaller amount on these too, using too much can cause the bond to seep over and into the channels making the window leak.

